

SW-1070



Hybrid Control Panel

Safe & Secure

SW-1070

User Manual
(UK & Ireland)

www.hkc.ie

Security

Installer _____
Address _____

Tel: _____ Fax: _____
After Hours: _____
Date: _____

Alarm Centre - Technistore (UK only)
Tel: _____

Note: Please refer to RKP inner flap label for more details of Quick Codes, Inhibits and Audio Memo-Pad operation.

WARNING

While this system has been designed to the highest standards it does not offer guaranteed protection against burglary or fire. Any alarm system is subject to compromise or failure to activate for a variety of reasons. Therefore, good installation practices and regular maintenance are essential to ensure continuous satisfactory operation of the system. The transmission of text messages is dependent on the SMS service provider. HKC Ltd. cannot guarantee successful messaging. Messages which remain undelivered when the validity period expires are discarded. The validity period is the time the message is submitted plus 12 hours.

COPYRIGHT


© HKC Ltd. All Rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated in another language in any form or by any means - electronic, mechanical or otherwise without the prior written permission of HKC Ltd.

 
DISCLAIMER

HKC Ltd. makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. Further, HKC Ltd. reserve the right to revise this publication and to make changes from time to time in the contents hereof without obligation of HKC Ltd. to notify any person of such revision.


CE This marking certifies that this product has been tested in a representative system complying with the requirements laid down in Electromagnetic Compatibility directive 89/336/EEC and Low Voltage Directive 72/23/EEC and subsequent modifications.

USER MENU

Press  followed by the User Code. The first User Menu item is...

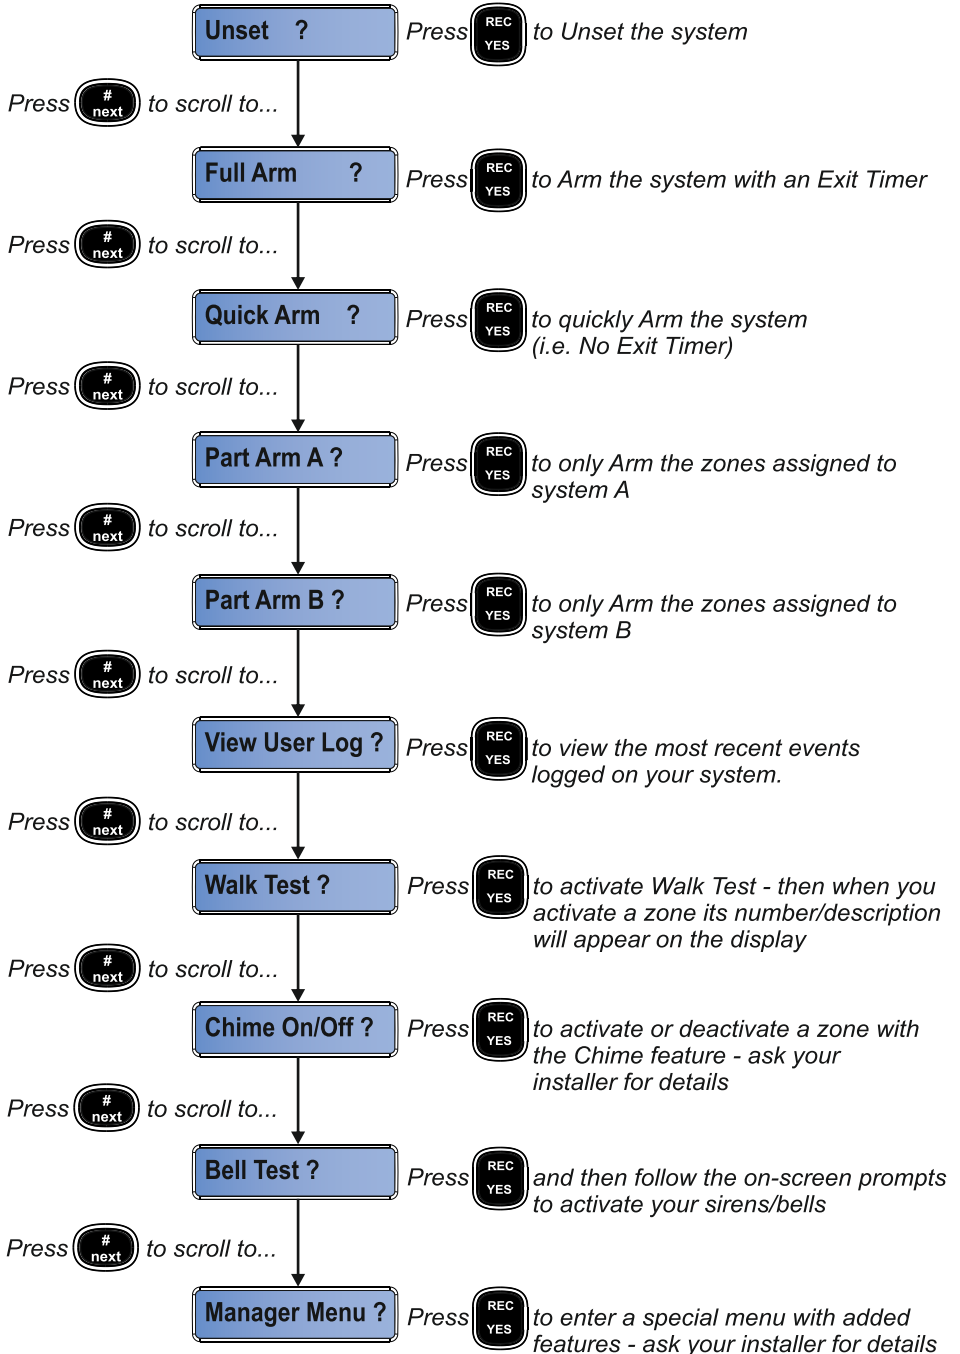

MANAGER MENU

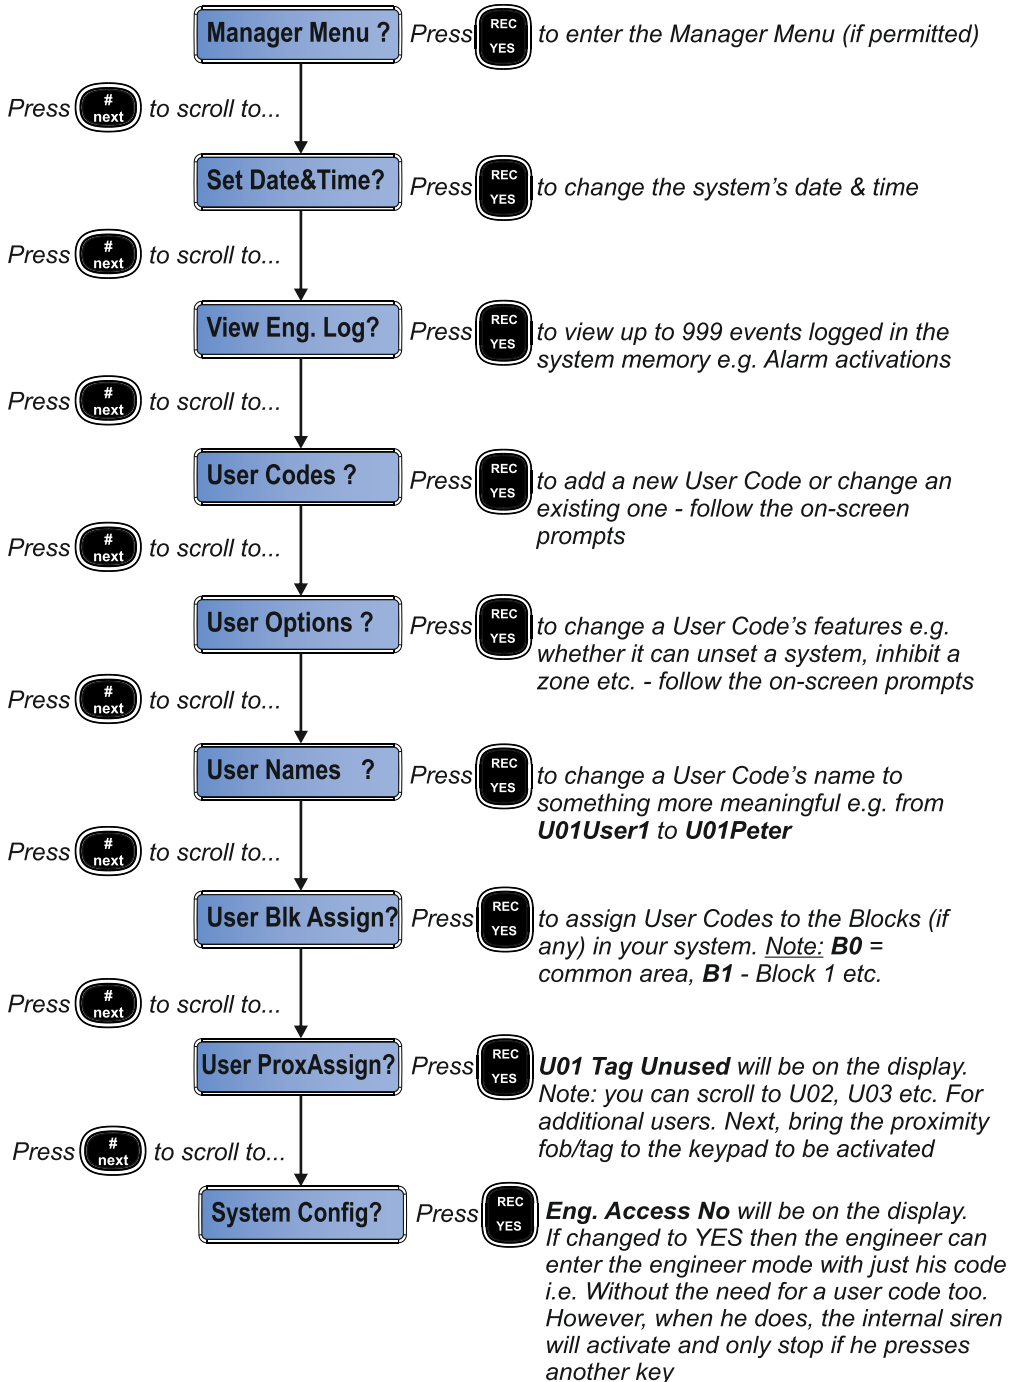 


Your system may be programmed to work without a User Menu. In which case...

FULL SET With Exit Timer

Press  followed by User Code
OR if allowed...

 Press    User Code*

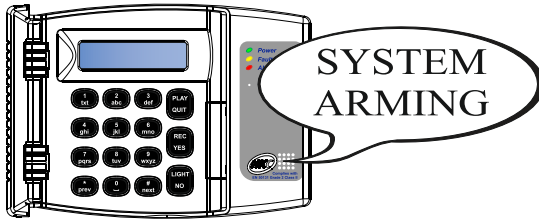


Buzzer sounds for length of exit time
Keypad displays exit time remaining




FULL SET Without Exit Timer

 Press    User Code*

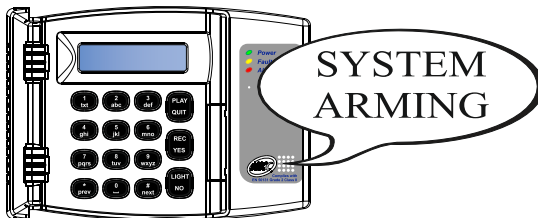

Keypad displays....

 


* *Quick Code with User Code is EN 50131 requirement*


SYSTEM UNSET

To unset the system or cancel an alarm

 Press  followed by User Code

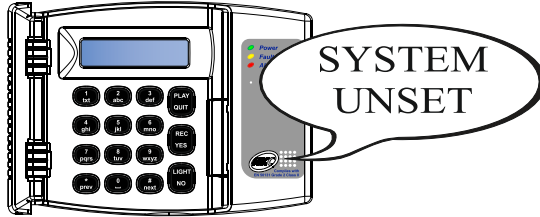


Note: If there was an alarm activation then the keypad will make an announcement.

You can terminate this by pressing 

SYSTEM SET & UNSET with PROXIMITY TAG

 Just bring the tag to the keypad as shown. The system will automatically set. Using the tag a second time will then unset the system

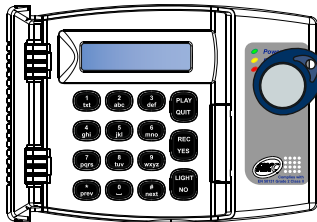

This is the location on the keypad to read a proximity tag.

Note: This feature is only available on keypads with this graphic.



 
PART SET A

Partial arming of the system

Part set will automatically inhibit the following zones

_____/_____
_____/_____

Press    User Code*

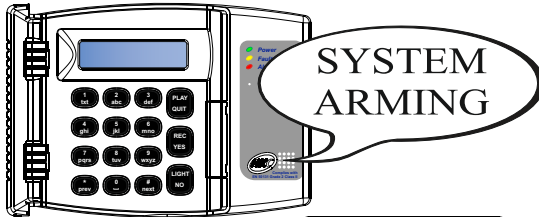

Keypad displays....

System Arming

 
PART SET B

Partial arming of the system

Part set will automatically inhibit the following zones

_____/_____
_____/_____

Press    User Code*

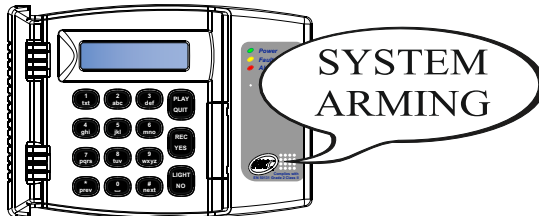

Keypad displays....

System Arming

NOTES: Zones inhibited in Part Set will remain inactive for the duration of system set.

* *Quick Code with User Code is EN 50131 requirement*

ZONE INHIBIT



CAUTION

Zones inhibited will remain inactive for the duration of the system set. This feature should be used with caution having first identified the reason for the zone condition.

Example 1: To Inhibit Zone 5

Press  User Code   

Keypad displays...



System will now set with Zone 5 inhibited

It is possible to inhibit a number of zones as shown below.

Example 2: To inhibit zones 5 & 3

Press  User Code     

NOTE: System will set in normal manner

 
FORCED ARMING



CAUTION

Zones inhibited by forced arming will remain inactive for the duration of the system set. This feature should be used with caution having first identified the reason for the zone condition.

Example: Zones 3, 4, 5 & 7 are open




Press  User Code   

System will now set with Zones 3,4,5 and 7 automatically inhibited for the duration of the system set.



REMOTE RESET (UK only)

Your system may be programmed to trigger a remote reset after a confirmed alarm activation. In which case follow the instructions below...

Press  followed by the User Code. The first User Menu item is...

 Press  to Unset the system

After the system announces the alarm events the following appears on the display...

 Where **nnnnn** is a five-digit number
↑
 Phone the Call Centre number on the inside cover


When you contact the Call Centre give them the five-digit number. They, in return, will give you a different five-digit number. Use this to reset the system.

Note: you will need to reset the system otherwise you will not be able to arm it

When you try to arm the system you will see the following...



Simply key-in the five-digit number given to you by the call centre. You will then see...



 
You are now free to continue arming your system

RF-KEYFOB

If your system has an RF-Keyfob please note the following.

RF-Keyfob in Quick Key mode

Green:- Transmission OK, Red: Transmission not OK, Orange:- Out of range

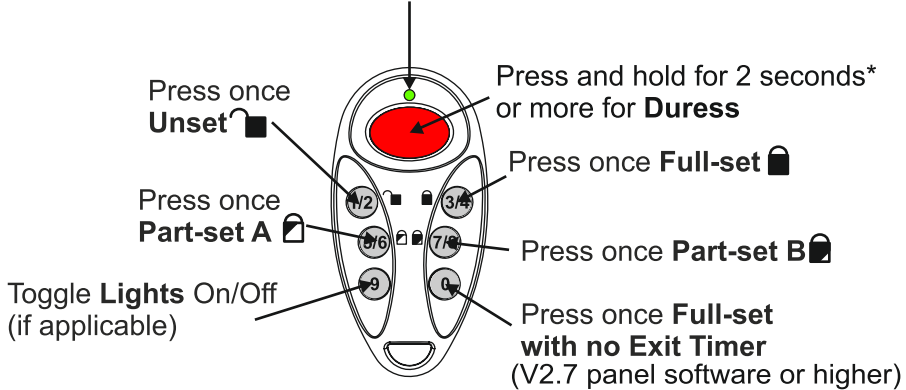

**This time is programmable - ask your installers for details*

Normally the RF-Keyfob works in “Quick Key” mode. However, you may ask your installer to set it up for “Secure Unset” mode.

In “Secure Unset” mode, to unset the system or to cancel an alarm press **0** followed by User Code.

Also in “Secure Unset” mode;

Press **Full Set**

Press **Part-set A**

Press **Part-set B**

Press **9** to toggles **Lights** On/Off (if applicable)

Note: Always make sure you get a green “transmission OK” light otherwise you will have to repeat your key-press.

Zone & Point Details

Z1 _____	Z36 _____	P50 _____
Z2 _____	Z37 _____	P51 _____
Z3 _____	Z38 _____	P52 _____
Z4 _____	Z39 _____	P53 _____
Z5 _____	Z40 _____	P54 _____
Z6 _____	Z41 _____	P55 _____
Z7 _____	Z42 _____	P56 _____
Z8 _____	Z43 _____	P57 _____
Z9 _____	Z44 _____	P58 _____
Z10 _____	Z45 _____	P59 _____
Z11 _____	Z46 _____	P60 _____
Z12 _____	Z47 _____	P61 _____
Z13 _____	Z48 _____	P62 _____
Z14 _____	Z49 _____	P63 _____
Z15 _____	Z50 _____	P64 _____
Z16 _____	Z51 _____	P65 _____
Z17 _____	Z52 _____	P66 _____
Z18 _____	Z53 _____	P67 _____
Z19 _____	Z54 _____	P68 _____
Z20 _____	Z54 _____	P69 _____
Z21 _____	Z56 _____	P70 _____
Z22 _____	Z57 _____	P71 _____
Z23 _____	Z58 _____	P72 _____
Z24 _____	Z59 _____	P73 _____
Z25 _____	Z60 _____	P74 _____
Z26 _____	Z61 _____	P75 _____
Z27 _____	Z62 _____	P76 _____
Z28 _____	Z63 _____	P77 _____
Z29 _____	Z64 _____	P78 _____
Z30 _____	Z65 _____	P79 _____
Z31 _____	Z66 _____	P80 _____
Z32 _____	Z67 _____	P81 _____
Z33 _____	Z68 _____	P82 _____
Z34 _____	Z69 _____	P83 _____
Z35 _____	Z70 _____	P84 _____
		P85 _____
		P86 _____
		P87 _____
		P88 _____
		P89 _____

